

How to guides

Attaching decorative panels to drywall.

Tools

5mm tile packers

 CT-19

 CT-10

 CT-09DG

 CT-09

 CP-08ST

Clips



LP-M8A



LP-DF8

Fastmount Layout Guide TD-08

Panel and substrate




Ambience Okoumé by Plytech 12mm panel

Gib® 13mm Drywall

Installation steps

Installing LP-DF8 into drywall

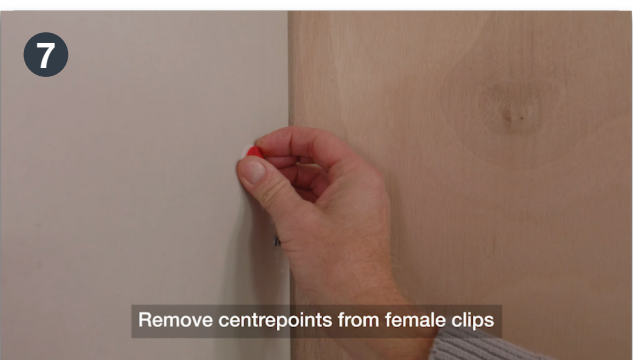

Installation steps

Installing LP-M8A into panel and mounting

