# How to guides Attaching heavyweight panels with hidden fixings.









Fastmount Layout Guide TD-09

### Panel and substrate



LightBeton by Plytech 19mm panel weighing 16.5kg/ m2

90 x 45 Pine framing








## Installation steps

#### Installing MC-F10 into substrate

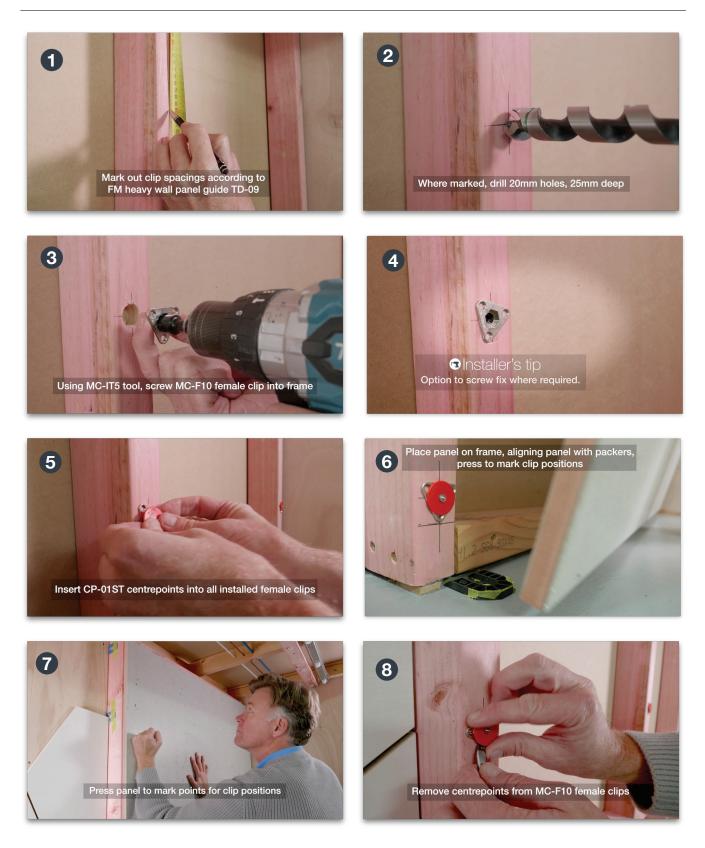


For further info and inspiration visit fastmount.com

Patent and trademark protected.

## Installation steps

#### Installing MC-M5 into panel and mounting

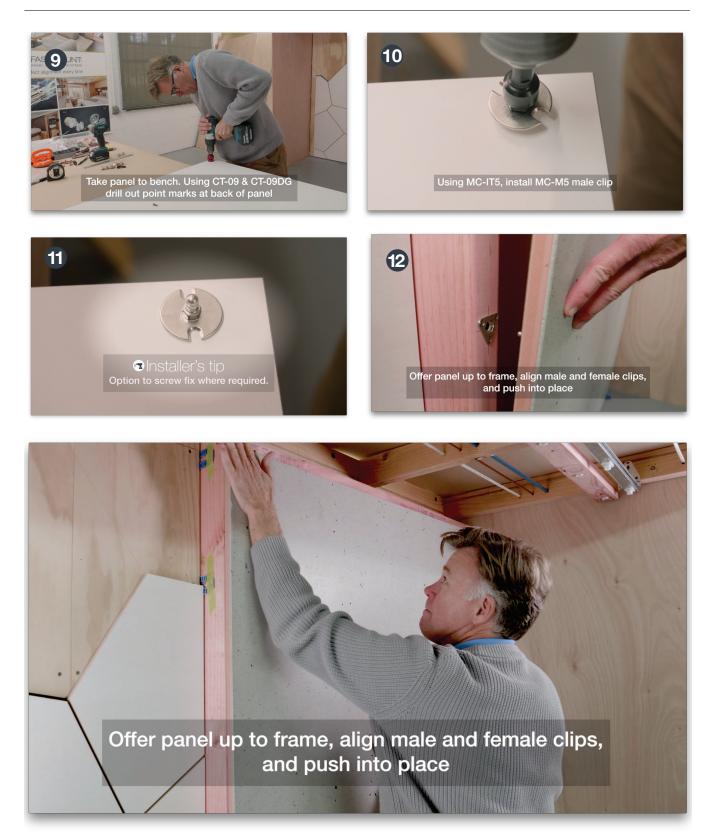

For further info and inspiration visit fastmount.com

Patent and trademark protected.